

Installation Instructions

Cabin Filter

Instrucciones de montaje

Filtro de habitaculo

Notice de montage

Filtre d'habitacle

C26087

LOCATION: BEHIND THE GLOVE COMPARTMENT*

QUANTITY USED: 1

DEGREE OF DIFFICULTY: MODERATE

ESTIMATED INSTALLATION TIME: 30 MINUTES

2003-11 Mazda 6

On 2010-11 models, under normal operating conditions the cabin air filter should be replaced every 24 months or 30,000 miles. In dusty areas change the cabin air filter more often.

On 2003-09 models, under normal operating conditions the cabin air filter should be replaced every 24 months or 25,000 miles. In dusty areas change the cabin air filter more often.

1. Open the glove compartment assembly.
2. Detach the stay damper from the glove compartment.
3. Carefully push inward at both side of the glove compartment and lower the glove compartment from the instrument panel.
4. Remove cabin air filter cover, then the cabin air filter, Fig. 1.
5. Install new cabin air filter, Fig. 1.
6. Install then glove compartment to the instrument panel.
7. Attach the stay damper to the glove compartment.
8. Close glove compartment.

