

Installation Instructions

Cabin Filter

Instrucciones de montaje

Filtro de habitaculo

Notice de montage

Filtre d'habitacle

C26175

LOCATION: BEHIND THE GLOVE COMPARTMENT

QUANTITY USED: 1

DEGREE OF DIFFICULTY: EASY

ESTIMATED INSTALLATION TIME: 18 MINUTES

Ford Motor Co. 2011-12 Fiesta

Under normal operating conditions the cabin air filter should be replaced every 12,000 miles. In dusty areas change the cabin air filter more often.

The air distribution system is equipped with a factory installed cabin air filter. The cabin air filter is located in the heater core and evaporator core housing which is located behind the glove box. Refer to Fig. 1.

⚠ WARNING



Turn The Engine Off

Failure to do so may cause electrocution, burns and severe injury.

