



**Application:** Application: Aplicación:  
Chrysler PT Cruiser \*

*\*Special note: 2001 PT Cruisers do not have filter housing to install filter. On 2001 models the filter housing would have to be purchased from the dealer and installed on vehicle before filter can be installed. On all other models the housing should be in the vehicle but a filter may not be installed. On these vehicles you will just install a filter in the existing housing.*



Fig 1

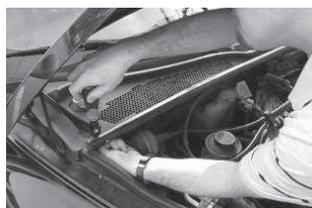


Fig 2



Fig 3



Fig 4



Fig 5



**Location of filter:**

Under the hood on the passenger side of the vehicle under the cowling.

**Tools:** Phillips-head screwdriver, possibly a flat blade screwdriver or blade; ratchet set or nut driver set

**To remove existing filter:**

1. Open hood and secure open using the prop rod on the right hand side of the vehicle.
2. Using the Phillips-head screwdriver, remove the 3 screw clips and bases from the passenger side cowling. (Fig 1)
3. Using the Phillips-head screwdriver, remove the 1 screw and base on the left side of the passenger side cowling. (Fig 2). You may need to gently pry the base loose with the flat blade screwdriver or blade.
4. Remove the rubber stop (Fig 3) on the left side of the cowling and pull up on the cowling to unclip it from the vehicle.
5. Slide the right side of the cowling out from under the driver side cowling to remove it (Fig 4)
6. Using the proper size socket and ratchet or nut driver loosen the 2 bolts (Fig 5) on the left side of the washer fluid reservoir but do not remove them.
7. Using the proper size socket and ratchet or nut driver loosen the 1 bolt (Fig 6) on the right side of the washer fluid reservoir but do not remove it.
8. Tilt the reservoir forward to get to the cabin filter housing and remove the cover. (Fig 7)
9. Remove the dirty filter if the vehicle has one; if not just install the new filter with air flow arrow printed on filter pointing towards the cab of the vehicle. (Fig 8)
10. Reinstall the filter cover and make sure that the 2 tabs on the bottom of the cover (Fig 9) fit into the slots on the bottom of the housing and secure the cover at the top.
11. Tighten the 3 bolts on the right and left side of the washer fluid reservoir.
12. Reinstall the passenger side cowling making sure that the tabs on the top of the cowling fit into the slots on the vehicle under the windshield.
13. Make sure the cowling is completely seated and reinstall the rubber stop on the left side of the cowling.
14. The right side of the cowling slides under the driver side cowling to lock in place.
15. Tuck the front edge of the cowling under the weather stripping.

Fig 6


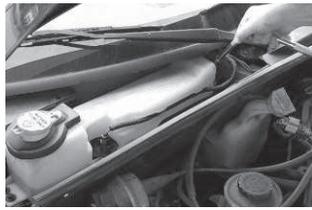


Fig 7

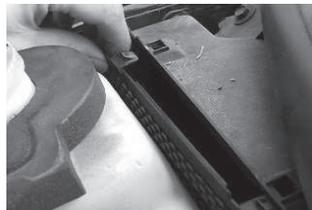

16. Reinstall the base on the left hand side of the cowling and then slide the screw into the base.

17. Reinstall the 3 bases along the front edge of the cowling and then slide the 3 screws into the bases.

18. Unhook the rod propping the hood open and secure back into position and close the hood.

Fig 8



Fig 9

