




Application: Application: Aplicación:  
Dodge Caliber; Jeep Patriot, Compass

Always refer to your current application guide for updated instructions

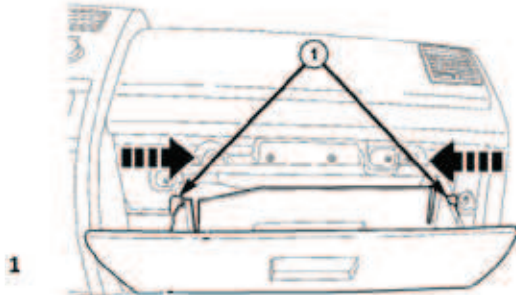


Location of cabin filter:  
Behind the glove compartment

Tools required:  
None

To remove existing filters:

1. Open glove compartment.
2. Squeeze sides of glove compartment to release past the stops. See figure 1.
3. Remove the housing cover. See figure 2.
4. Replace the old filter with the new one.
5. Repeat steps 1 - 3 to finish installation.

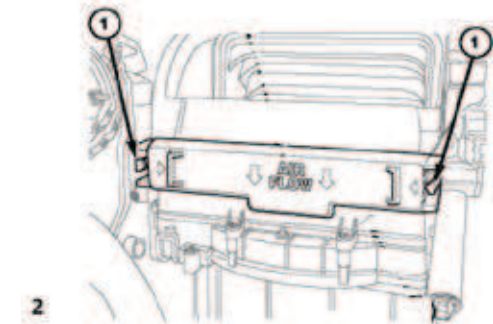

Référez-vous toujours à votre guide courant  
d'application pour des instructions mises à

**Emplacement des filtres de l'habitacle :**

Derrière le compartiment de gant

**Outils :**

Aucun

**Pour retirer les filtres existants :**

1. Ouvrez le compartiment de gant.
2. Serrez les côtés du compartiment de gant pour libérer après les arrêts. Voir le schéma 1.
3. enlever la couverture de logement. Voir le schéma 2.
4. Remplacez le filtre ancien avec le neuf.
5. Répétez les étapes 1 - 3 pour finir l'installation.

Refiera siempre a su guía actual del uso para las  
instrucciones actualizadas.

**Lugar del filtro de cabinas:**

Detrás de la guantera

**Herramientas:**

Ninguno

**Para quitar los filtros existentes:**

1. Abra la guantera.
2. Exprima los lados de la guantera para lanzar más allá de las paradas. Véase el cuadro 1.
3. quitar la cubierta de la cubierta. Véase el cuadro 2.
4. Substituya el filtro viejo por el nuevo.
5. Repita los pasos 1 - 3 para acabar la instalación.