



Application: Application: Aplicación:

Honda Accord 1998-2002, Acura CL, Acura TL

Location of cabin filter:

Under the dash behind the glove compartment on passenger side of vehicle

Tools: Standard and Phillips screwdriver

To remove existing filters:

1. Open the glove compartment and remove the two locking tabs from either side of the glove compartment.
2. Remove four screws from the left, center and right of the glove compartment and close the glove compartment (Fig. 1,2).
3. Remove the access panel from the right side of the glove compartment.
4. Remove the two bottom screws under the access panel (Fig. 3).
5. Remove the access panel in center of the console under the radio and remove the screw on the right side of this panel (Fig. 4).
6. Remove the access panel under the glove compartment.
7. Remove two screws on the underside of the glove compartment and one screw on the metal bar (Fig. 5).
8. Remove the glove compartment, carefully disconnecting the light wire on the left side (Fig. 6, 7).
9. Remove the remaining two screws on either side of the metal bar and remove bar (Fig. 8, 9). (Do not remove the ground screw.)
10. The cabin filter access door is now visible, pull up on the door to release and remove (Fig. 10).
11. Pull out the first filter in housing and slide the second into the opening and remove (Fig. 11, 12).
12. Remove the dirty filters from the filter housing and replace with clean filters, paying careful attention to the air flow direction arrows (Fig. 13).
13. Reverse steps to complete filter change out.

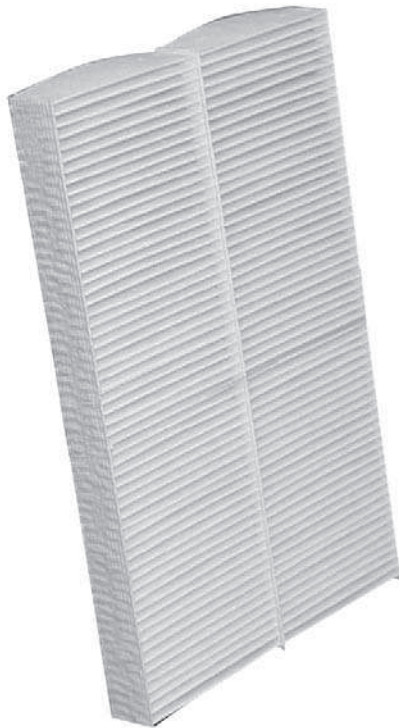


Fig. 1



Fig. 2



Fig. 3



Fig. 4



Fig. 5



Fig. 6



Fig. 7



Fig. 8



Fig. 9



Fig. 10



Fig. 11



Fig. 12



Fig. 13

